

# Thule Adapters - Fit Guide

## Before installation

- The installation of the adapter must be carried out by a qualified person
- In case you want to install a tent or a panel, make sure that the adapter is well positioned taking the windows, garage and door opening into account
- Check if you have a solid back ground for the installation of the awning adapter
- The adapter must support the awning at the awnings spring arms for a correct and stable mounting. When this is not possible use a full length adapter
- In order to get a watertight installation, use acid free silicone to fill up the drilled holes
- Always read the installation instructions carefully

## Select the right adapter

### 1 Vehicle type



Motorhome



Caravan



Van

### 2 Vehicle brand

Model & Year

### 2 Select the mounting location and awning type

Wall mounting

- Most common installation
- Flat adapter mostly included

Roof mounting

- On top of the vehicle: more space under the awning
- Better integrated design
- Alternative in case of lack of space or width restrictions
- Caravan rail remains free

Rail mounting

TO 1200:

- Easy installation without adapter
- Not permanent


### 3 Is there an adapter with brand name available (manufacturer adapter)? If not: choose from the universal adapter range

### 4 Free space:

On the roof: Only count the straight space between roof curves for the installation of the adapters



On the wall: Avoid lights and ventilation caps. Make sure the door can open under an opened awning

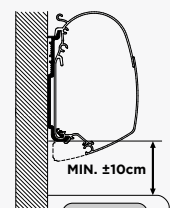


# Adapters for wall-mounted awnings

## UNIVERSAL

### Caravan Rail Luxe


307922 6.00 m: 10 pcs

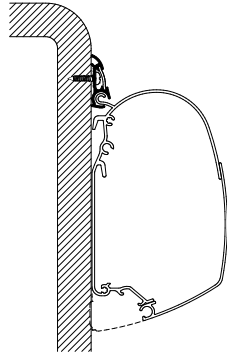

Thule Omnistor: 5200 / 8000 / 2000 / 1200

### Caravan Rail


307899 3.00 m: 20 pcs  
307908 6.00 m: 20 pcs

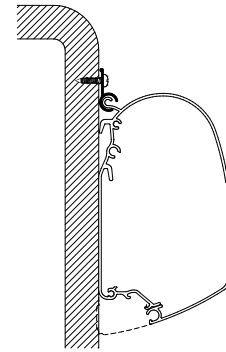

Thule Omnistor: 5200 / 8000 / 2000 / 1200

### Flat Adapter


- 307915 40 cm: 5 pcs
- 307909 75 cm: 5 pcs
- 308040 3.00 m
- 308041 3.50 m
- 308042 4.00 m
- 308043 4.50 m
- 308044 5.00 m
- 308046 6.00 m

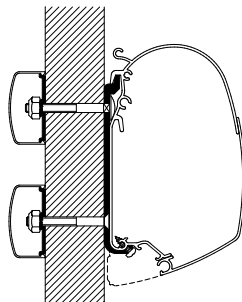

Thule Omnistor: 5200 / 8000 / 4900

### High-Top Adapter


- 308005 Set: 1x 8 cm + 2x 30 cm
- 308008 3.00 m
- 308012 4.00 m
- 309960 4.50 m
- 309961 5.50 m

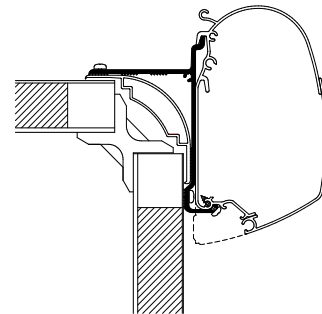

Thule Omnistor: 5200 / 8000 / 4900

### Omni Wall


307905 Set: 2x 8 cm + 1x 4 cm

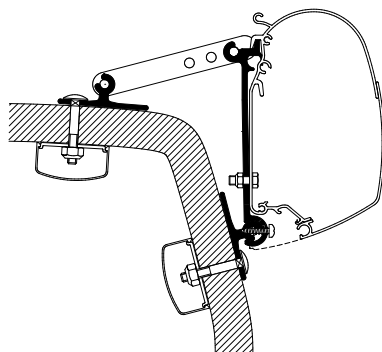

Thule Omnistor: 5200 / 4900 / 2000

### Omni Roof

307910 Set: 3x 8 cm

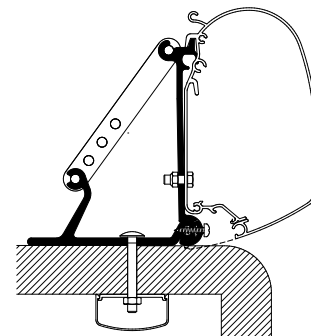


Thule Omnistor: 5200 / 4900 / 2000

# Adapters for wall-mounted awnings

## UNIVERSAL

### Omni Auto


307912 Set: 2x 8 cm

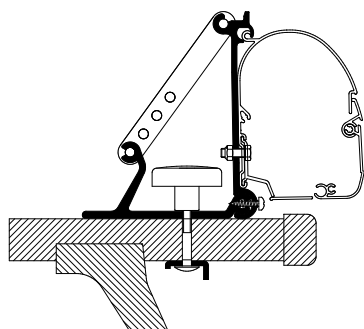

Thule Omnistor: 5200 / 8000 / 2000

### Caravan Adapter


307881 Set: 2x 8 cm + 2x 4 cm

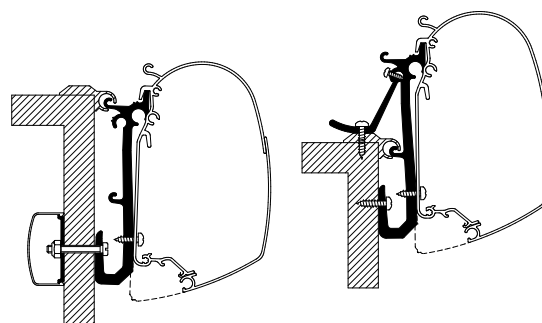

Thule Omnistor: 5200 / 8000 / 4900 / 2000

### Rail Bracket

- 309853 3.50 m: 10 pcs
- 309854 4.00 m: 10 pcs
- 309855 4.50 m: 10 pcs

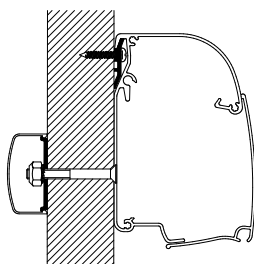


Thule Omnistor: 5200 / 8000 / 4900

# Adapters for wall-mounted awnings

## MANUFACTURER

### Adria Coral


308007 Set: 2x 30 cm + 2x 8 cm

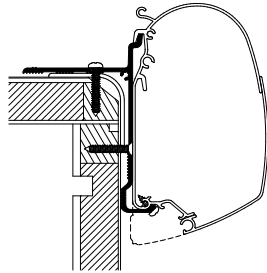

Thule Omnistor: 5200 / 8000 / 4900

### Arca ≥ 2009


308484 4.50 m - Set: 1x 8 cm + 2x 40 cm

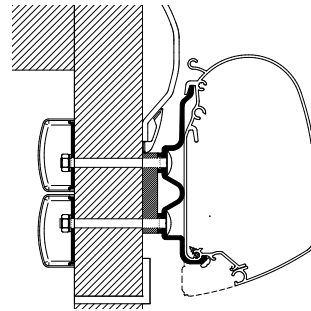

Thule Omnistor: 5200 / 8000 / 4900

### Bürstner Adapter 2017


301680 Set: 2x 40 cm + 2x 8 cm

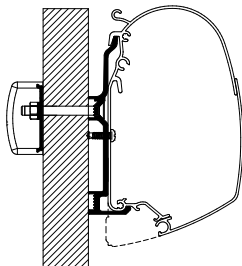

Thule Omnistor: 5200

### Bürstner Adapter


- 308025 Set: 2x 35 cm + 1x 8 cm
- 308027 3.00 m
- 308028 3.50 m
- 308029 4.00 m
- 308030 4.50 m
- 308031 5.00 m
- 308032 5.50 m

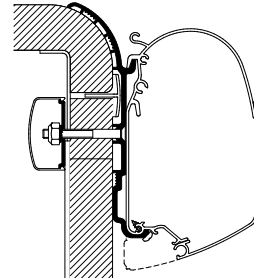

Thule Omnistor: 5200 / 8000 / 4900

### Bürstner Ixeo


- 309978 Model T680 - 4.00 m
- 309979 Model T728/734 - 4.50 m
- + Dethleffs 4-Travel

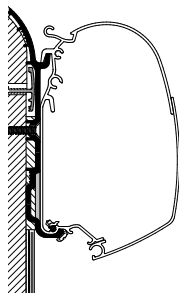

Thule Omnistor: 5200 / 8000 / 4900

### Carado | Sunlight

309983 Set: 1x 17.5 cm + 1x 4 cm + 1x 40 cm

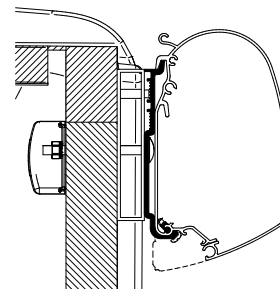

Thule Omnistor: 5200 / 8000 / 4900


# Adapters for wall-mounted awnings

## MANUFACTURER

### Dethleffs Globebus



- 308934 Set: 2x 4 cm + 2x 17.5 cm - TO 5200 (4.00 m)
- 308004 Set: 2x 8 cm + 2x 40 cm - TO 8000 (4.00 m - 6.00 m)
- 308002 3.00 m
- 308003 3.50 m

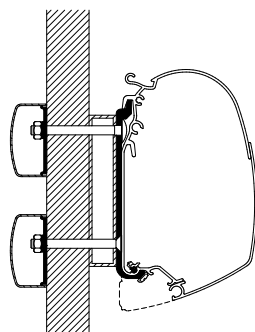


Thule Omnistor: 5200 / 8000 / 4900

### Eriba Touring



- 307882 Set: 3x 4 cm

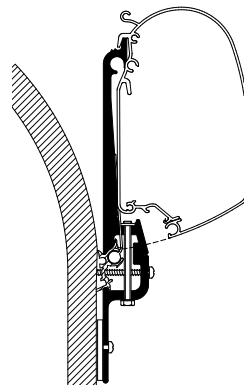


Thule Omnistor: 5200 / 4900 / 2000

### Eden | Allegro < 2010



- 307919 Set: 1x 70 cm + 1x 30 cm + 1x 8 cm
- 308022 3.50 m
- 308023 4.00 m

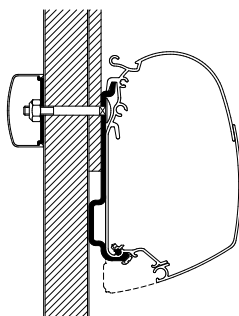


Thule Omnistor: 5200 / 8000 / 4900

### Eden | Allegro | Trigano ≥ 2010



- 308764 Set: 3x 50 cm

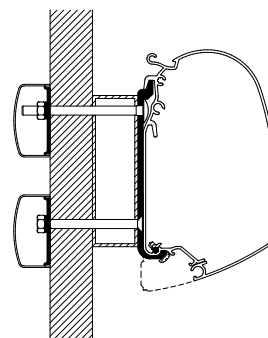


Thule Omnistor: 5200 / 8000 / 4900

### Hymer Car 99



- 307885 Set: 3x 4 cm

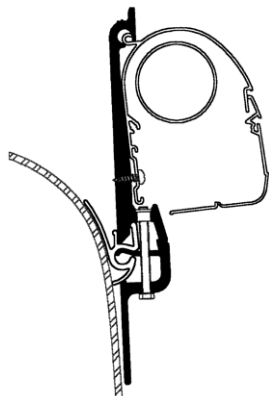


Thule Omnistor: 5200 / 8000 / 4900

### Hymer Car 302 - Ducato H1



- 308659 Set: 2x 12 cm

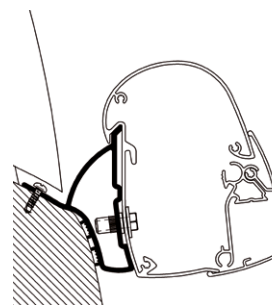


Thule Omnistor: 5102

# Adapters for wall-mounted awnings

## MANUFACTURER

### Hymer 2016


- 309985 2.60 m
- 309986 3.00 m
- 309987 3.50 m
- 309988 4.00 m
- 309989 4.50 m
- 309990 5.00 m
- 309991 5.50 m
- 309992 6.00 m
- ≥ 2012

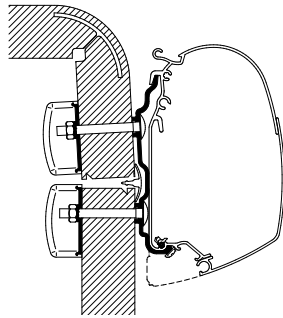

Thule Omnistor: 5200 / 8000 / 4900

### Hymercamp ≤ 2011


- 307933 3.00 m
- 307944 3.50 m
- 307957 4.00 m
- 307965 4.50 m
- 307971 5.00 m
- 307976 5.50 m
- 308686 6.00 m
- + Rapido

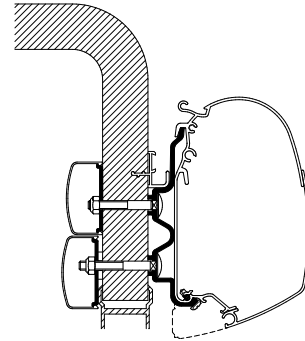

Thule Omnistor: 5200 / 8000 / 4900

### Hymer S ≤ 1994


- 307877 Set: 2x 8 cm + 2x 35 cm
- 307928 3.00 m

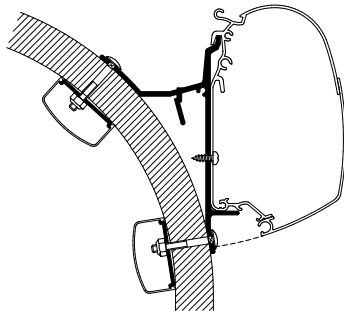

Thule Omnistor: 5200 / 4900

### Hymer SX


- 308017 4.00 m

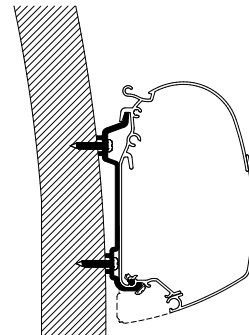

Thule Omnistor: 5200 / 8000 / 4900

### Hymer B2 - Van


- 307932 3.00 m
- 307943 3.50 m
- 307956 4.00 m
- 307964 4.50 m
- 307970 5.00 m
- 307975 5.50 m
- 307978 6.00 m
- + Eriba Motorhome 2009

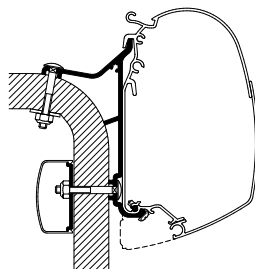

Thule Omnistor: 8000 / 5200 / 4900

### Knaus Adapter 2017

- 301681 Set: 2x 17.5 cm + 2x 4 cm

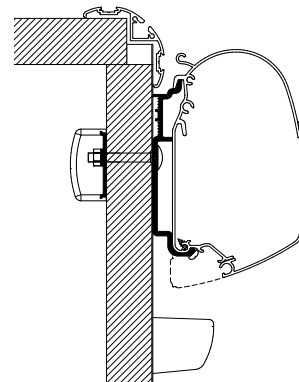


Thule Omnistor: 5200

# Adapters for wall-mounted awnings

## MANUFACTURER

### Knaus Deseo


301900 3.50 m

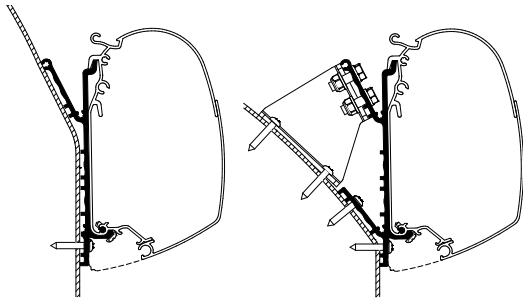

Thule Omnistor: 5200

### Laika Ecovip - Rexosline


308047 Set: 2x 30 cm  
308049 4.50 m

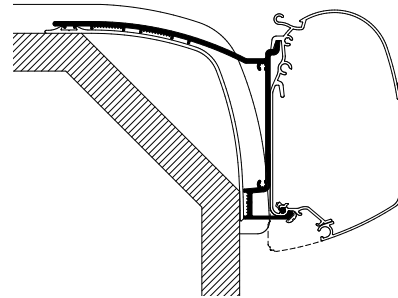

Thule Omnistor: 5200 / 8000 / 4900

### Laika X


308297 Set: 3x 17.5 cm

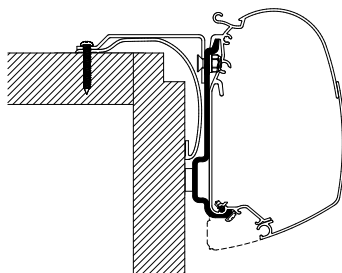

Thule Omnistor: 5200 / 4900

### Pilote Explorateur


308006 Set: 2x 8 cm + 2x 40 cm  
308014 4.00 m

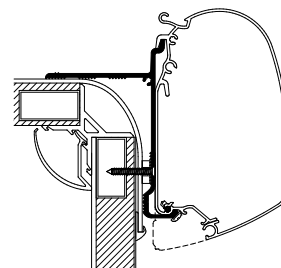

Thule Omnistor: 5200 / 8000 / 4900

### Rapido Club ≥ 1995


307890 Set: 3x 8 cm

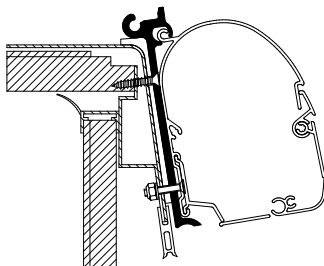

Thule Omnistor: 2000

### Rapido Serie

307923 Set: 2x 18 cm + 1x 1 m (Serie 7)  
307911 Set: 2x 18 cm + 2x 8 cm (Serie 9)  
307931 3.00 m  
307942 3.50 m  
307955 4.00 m  
308854 5.00 m

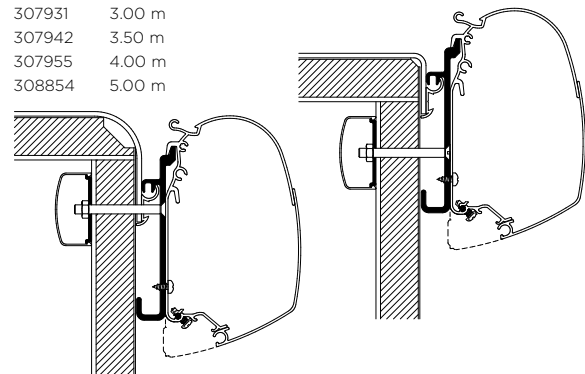


Thule Omnistor: 5200 / 8000 / 4900

# Adapters for wall-mounted awnings

## MANUFACTURER

### Le Voyageur


307953 4.00 m

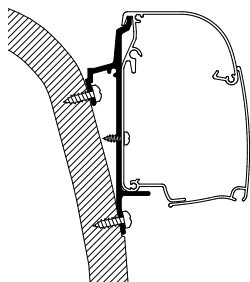

Thule Omnistor: 8000 / 4900

### Swift Rio

307028 Set: 1x 17.5 cm + 1x 4 cm + 1x 40 cm

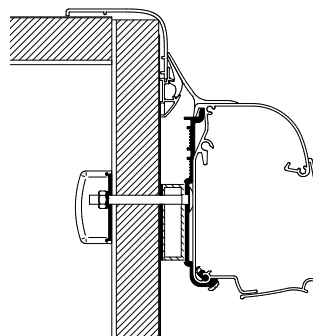


Thule Omnistor: 5200 / 4900

# Adapters for wall-mounted awnings

## VAN

### Brandrup Rail


307886 Set: 2x 8 cm

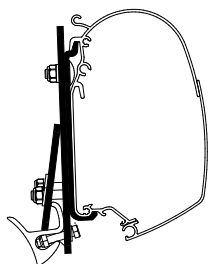

Thule Omnistor: 5200 / 4900 / 2000

### Ducato | Jumper | Boxer ≤ 2006


307913 Set: 3x 8 cm

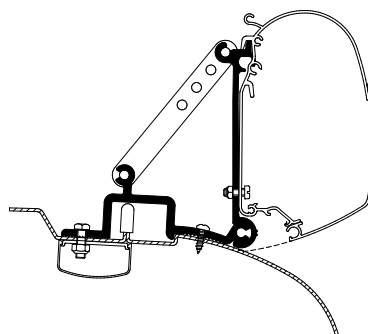

Thule Omnistor: 5200 / 4900

### Ducato | Iveco H2 Lift Roof


308960 Set: 3x 17.5 cm

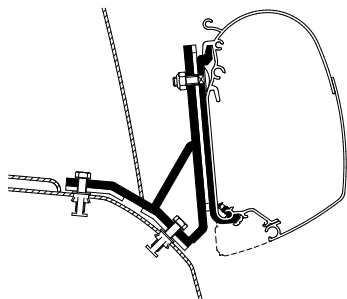

Thule Omnistor: 5200 / 4900

### Ducato H3 + EPDM


309999 Set: 2x 50 cm + 1x 10 cm

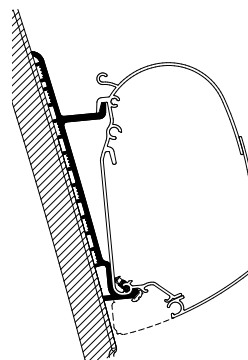

Thule Omnistor: 5200 / 4900

### Ducato H1 - Hymer Car 302


308659 Set: 2x 12 cm

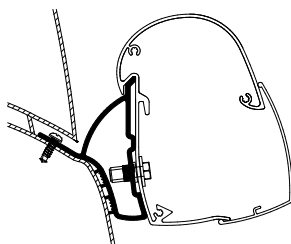

Thule Omnistor: 5102

### Ford Transit/Tourneo Custom

Thule Omnistor 4900 awning + adapter included  
 301776 2.60 m anthracite 31 - LHD (EU)  
 301777 2.60 m anthracite 31 - RHD (UK)

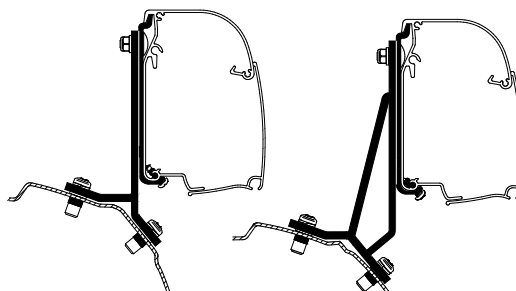


# Adapters for wall-mounted awnings

## VAN

### Ford Transit High Roof


307999 Set: 2x 50 cm + 1x 50 cm

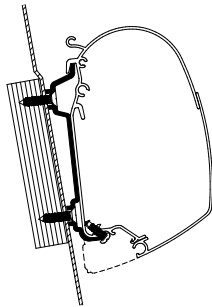

Thule Omnistor: 5200 / 8000 / 4900


### PSA Minivan Adapter

Thule Omnistor 4900 awning + adapter included  
 301769 2.60 m anthracite 31 - LHD (EU)  
 301770 2.60 m anthracite 31 - RHD (UK)  
 + Citroën Spacetourer | Peugeot Traveller | Toyota Proace

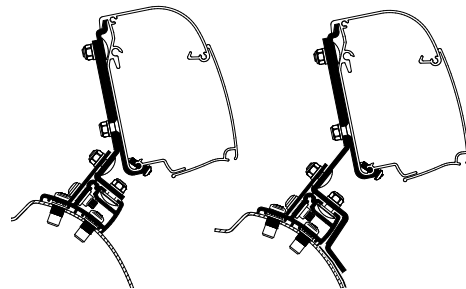

### Renault Master 1998-2010


307918 Set: 3x 8 cm

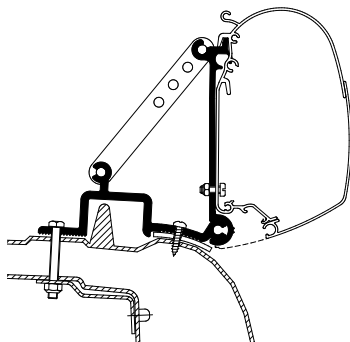

Thule Omnistor: 5200 / 8000 / 4900 / 2000

### Renault Master High Roof H3


308072 Set: 2x 50 cm

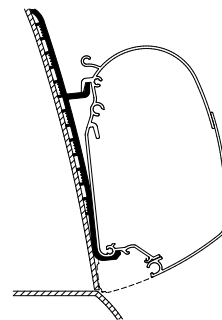

Thule Omnistor: 5200 / 8000 / 4900

### Renault Trafic | Opel Vivaro


307996 Set: 2x 50 cm  
 + Nissan Primastar

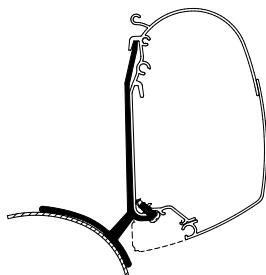

Thule Omnistor: 5200 / 4900

### Van

307884 Set: 1x 4 cm + 2x 8 cm

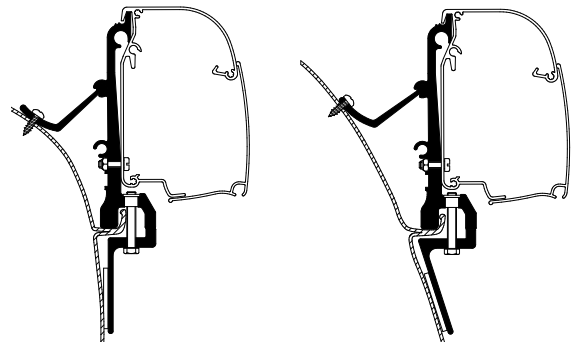


Thule Omnistor: 5200 / 4900 / 2000

# Adapters for wall-mounted awnings

## VAN

### VW T2 & T3


307880 Set: 2x 8 cm + 1x 4 cm

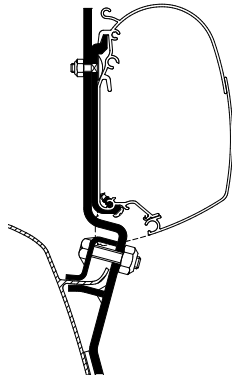

Thule Omnistor: 5200 / 4900

### VW T4


307879 Set: 2x 8 cm

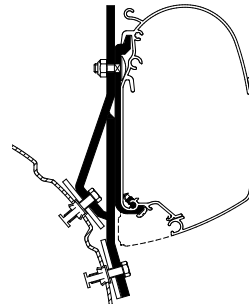

Thule Omnistor: 5200 / 4900

### VW T4 Lift Roof

307887 Set: 2x 8 cm

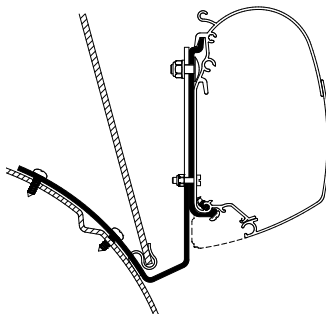

Thule Omnistor: 5200 / 4900

### VW T5/T6 Reimo Multirail



Thule Omnistor 4900 + Adapter + Rain Gutter


301410 2.60 m anthracite 31 - LHD (EU)

301420 3.00 m anthracite 31 - LHD (EU)

301411 2.60 m anthracite 31 - RHD (UK)

301421 3.00 m anthracite 31 - RHD (UK)

**NOTE:** Reimo exclusivity

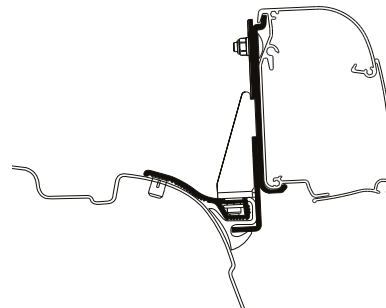


### VW T5/T6

Thule Omnistor 5102 + Adapter

309851 2.60 m anthracite 31

309852 2.60 m grey 31

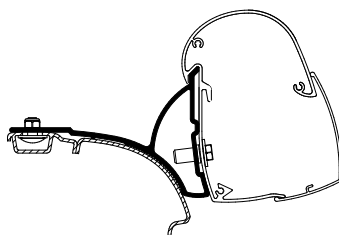

### VW T5/T6 (without rail)

Thule Omnistor 4900 Awning + Adapter

301772 2.60 m anthracite 31 - LHD (EU)


301773 3.00 m anthracite 31 - LHD (EU)

301774 2.60 m anthracite 31 - RHD (UK)

301775 3.00 m anthracite 31 - RHD (UK)



**New**

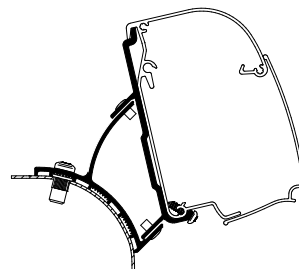


Thule Omnistor: 4900

# Adapters for wall-mounted awnings

## VAN

### Westfalia Adapter


308426 Set: 3x 8 cm

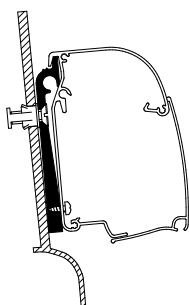

Thule Omnistor: 5200 / 4900

### Westfalia Ford Nugget

309984 Set: 2x 12 cm

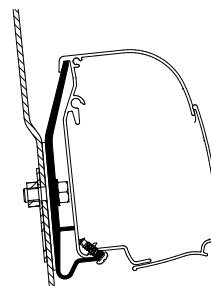

Thule Omnistor: 4900 (2.60 m)


# Adapters for roof-mounted awnings

## UNIVERSAL

### Flat Roof



308097	3.00 m
308098	3.50 m
308099	4.00 m
308100	5.50 m
306799	6.00 m

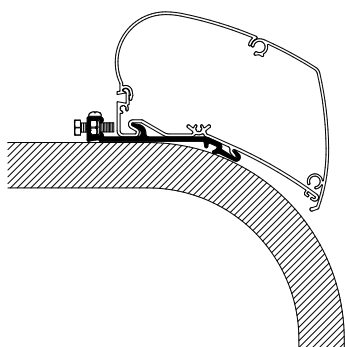


Thule Omnistor: 9200 / 6300 / 6200

### Installation profiles



308054	Set: 2x mounting rails + Adapter
308055	Set: 3x mounting rails + Adapter

Awnings	≤ 3.50 m:	1x 308054
Awnings	3.75 m - 4.50 m:	1x 308055
Awnings	≥ 5.00 m:	2x 308054

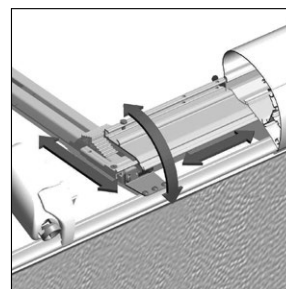


Thule Omnistor: 9200 / 6300 / 6200

### Roof Top



308299	Set: 2x 27 cm + 2x 50 cm
--------	--------------------------

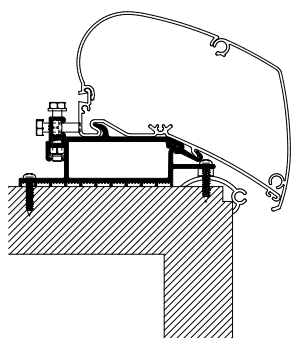

Thule Omnistor: 9200 / 6300 / 6200


# Adapters for roof-mounted awnings

## MANUFACTURER MOTORHOME

### Carthago Chic < 2014



- 309892 3.50 m
- 309888 4.00 m
- 309889 4.50 m
- 309890 5.00 m
- 309891 5.50 m

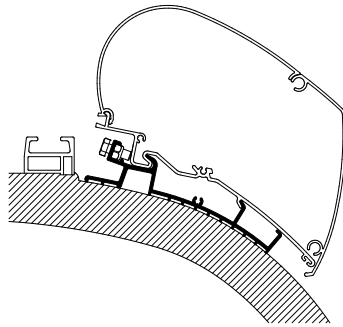


Thule Omnistor: 9200 / 6300 / 6200

### Carthago C-Line ≥ 2014



- 307250 3.50 m
- 307251 4.00 m
- 307252 4.50 m
- 307253 5.00 m
- 307254 5.50 m
- 301439 6.00 m

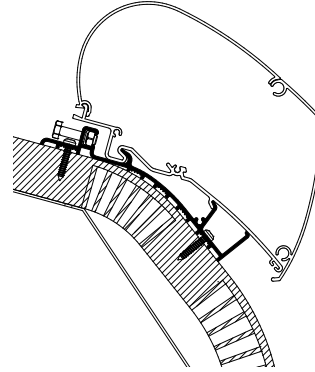


Thule Omnistor: 9200 / 6300 / 6200

### Concorde



- 301415 6.00 m

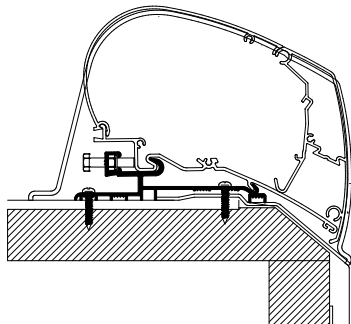


Thule Omnistor: 9200

### Esterel



- 308110 4.00 m

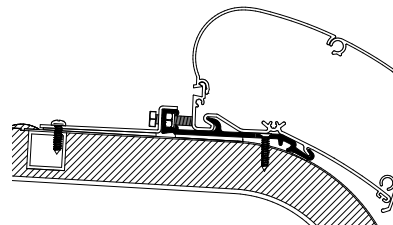


Thule Omnistor: 9200 / 6300 / 6200

### Giottiline



- 308107 Set: 2x 10 cm + 2x 40 cm

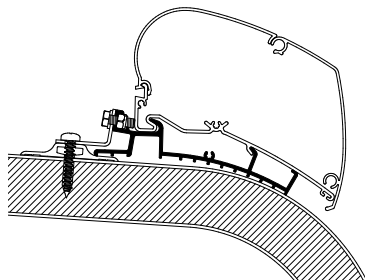


Thule Omnistor: 9200 / 6300 / 6200

### Hobby Optima LED



- 301902 Set: 2x 27cm + 2x 50 cm

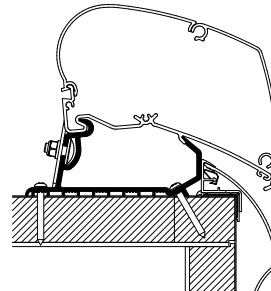


Thule Omnistor: 9200 / 6300 / 6200

# Adapters for roof-mounted awnings

## MANUFACTURER MOTORHOME

### Hymer SX


- 308087 3.50 m
- 308088 4.00 m
- 308089 4.50 m
- 308090 5.00 m
- 308091 5.50 m
- 306800 6.00 m

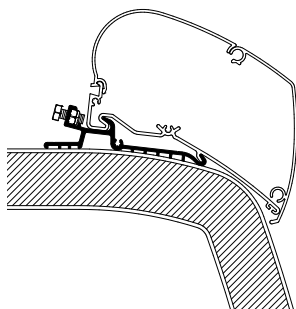

Thule Omnistor: 9200 / 6300 / 6200

### Hymer 2013


- 306951 3.50 m
- 306952 4.00 m
- 306953 4.50 m
- 306954 5.00 m
- 306955 5.50 m
- 306956 6.00 m

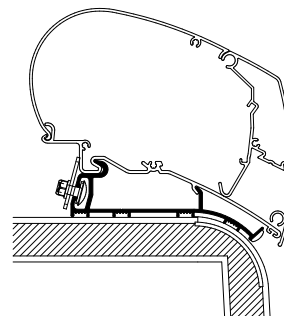

Thule Omnistor: 9200 / 6300 / 6200

### LMC Liberty TI/TEC


- 307042 3.00 m
- 307043 3.50 m
- 307044 3.75 m
- 307045 4.00 m
- 307046 4.50 m
- 307049 5.00 m
- 307047 5.50 m
- 307048 6.00 m
- + Bürstner Aviano 2016

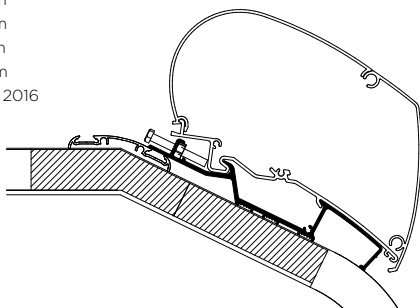

Thule Omnistor: 9200 / 6300 / 6200

### LMC Explorer - Cruiser MJ2018


- 301473 3.50 m
- 301474 4.00 m
- 301475 4.50 m
- 301480 5.00 m
- 301476 5.50 m

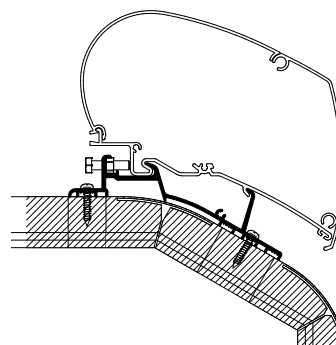

Thule Omnistor: 9200 / 6300 / 6200

### Carthago Malibu


- 308078 3.50 m
- 308079 4.00 m
- 301417 4.50 m
- 301418 5.00 m

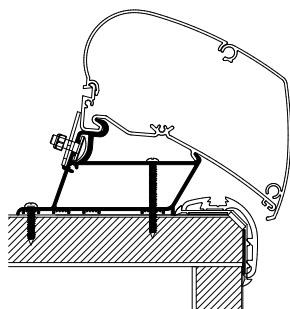

Thule Omnistor: 6300 / 6200

### Niesmann Smove

- 301423 Model 6.9B/Q - 3.00 m
- 301424 Model 7.4B/E - 3.50 m

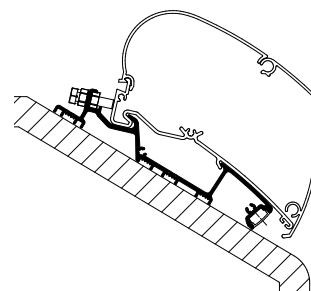


Thule Omnistor: 6300 / 6200

# Adapters for roof-mounted awnings

## MANUFACTURER MOTORHOME

### Rapido Distinction


- 309944 4.50 m
- 301764 5.00 m
- 301765 6.00 m

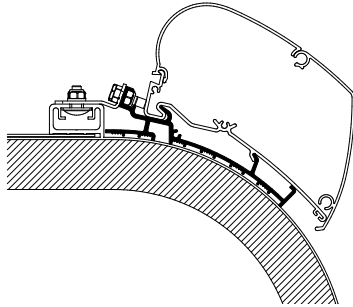

Thule Omnistor: 9200 / 6300 / 6200

### Autosleepers 2013


- 306794 3.00 m
- 306795 3.50 m
- 306796 4.00 m
- 306797 5.00 m

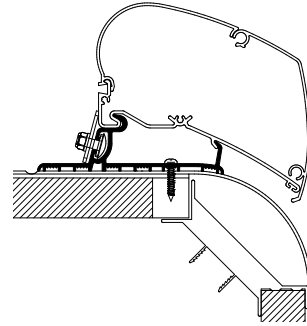

Thule Omnistor: 9200 / 6300 / 6200

### Swift Escape 2017

- 301412 Model 604/695 - 3.00 m
- 301413 Model 622/614/664/685 - 3.50 m
- 301414 Model 674/684/694 - 4.25 m

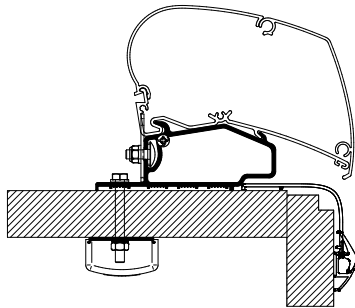


Thule Omnistor: 9200 / 6300 / 6200

# Adapters for roof-mounted awnings

## MANUFACTURER CARAVAN

### Adria Caravan ≥ 2015

309982 Set: 2x 50 cm + 2x 27 cm

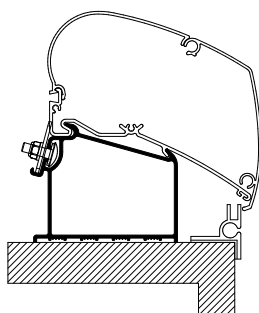


Thule Omnistor: 9200 / 6300 / 6200

### Caravan Roof Adapter



306757 Set: 3x 1.00 m  
 309957 3.00 m  
 309962 3.25 m  
 309958 3.50 m  
 309963 3.75 m  
 306807 4.00 m  
 309964 4.25 m  
 306809 4.50 m  
 307132 5.00 m  
 307133 5.50 m  
 309959 6.00 m

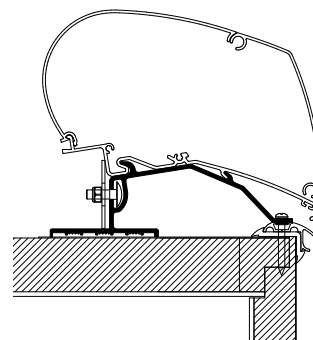

Fits Thule Omnistor Awnings on different vehicle brands:  
 Fendt, Dethleffs, LMC\*, Trigano: 9200 / 6300 / 6200  
 \*Extra fixation: LMC Caravan Kit 307064


### Eriba Touring > 2008

Adapter + LED

307392 2.80 m Triton

307391 3.25 m Troll

**NOTE:** Exclusively via Hymer Eriba Touring Dealer

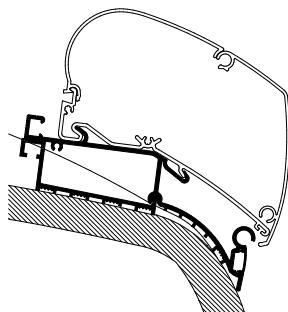


Thule Omnistor: 6300 / 6200

### Fendt Brilliant




309692 Set: 2x 11.5 cm + 1x 27 cm + 1x 50 cm (< 4.50 m)

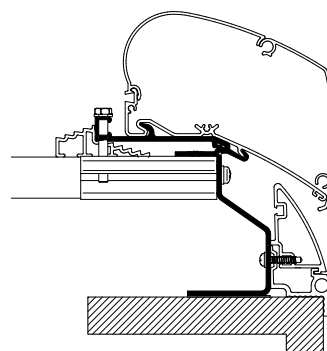

Thule Omnistor: 9200 / 6300 / 6200

### Hobby Caravan 2009

308663 Set: 2x 27 cm + 2x 50 cm

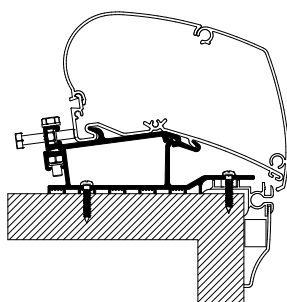


Thule Omnistor: 9200 / 6300 / 6200

### Hobby Premium & Ontour



309819 Set: 2x 27 cm + 2x 50 cm

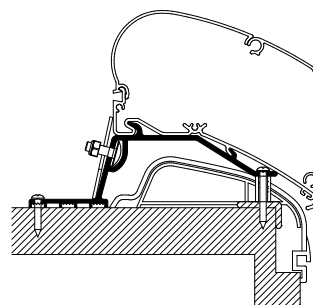


Thule Omnistor: 9200 / 6300 / 6200

# Adapters for roof-mounted awnings

## MANUFACTURER CARAVAN

### Hobby Caravan ≥ 2014

306948 Set: 2x 60 cm + 2x 27 cm

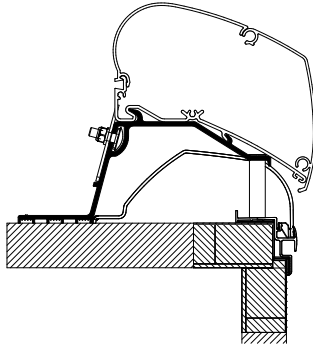


Thule Omnistor: 9200 / 6300 / 6200

### Hymer 2013 Nova Roof




- 306951 3.50 m
- 306952 4.00 m
- 306953 4.50 m
- 306954 5.00 m
- 306955 5.50 m
- 306956 6.00 m

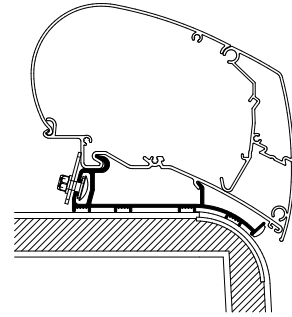

Thule Omnistor: 9200 / 6300 / 6200

### Hymer Eriba Touring 820

301682 5.00 m

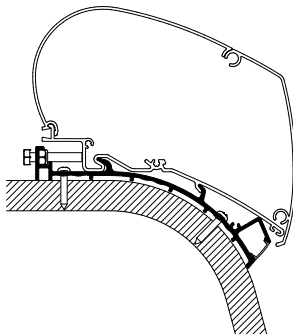


Thule Omnistor: 9200 / 6300 / 6200

### LMC Caravan Roof Adapter Kit



307064

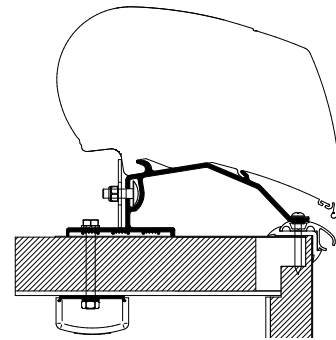


Thule Omnistor: 9200 / 6300 / 6200

# Adapters for vans

## VAN

### Ducato | Jumper | Boxer 1994-2006

Adapter + EPDM  
308058

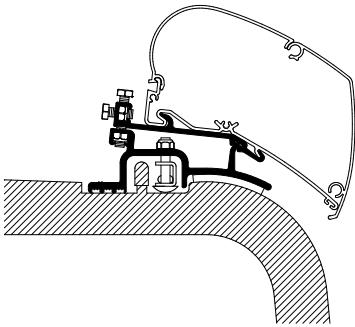


Thule Omnistor: 6300 / 6200



### Ducato | Jumper | Boxer ≥ 2007

Adapter + EPDM + Adapter covers  
301649 Set: 2 x 27 cm + 1 x 10 cm (L2H2 3.25 m)  
301650 Set: 2 x 27 cm + 2 x 10 cm (L3H2 3.75 m | L4H2 4.00 m)

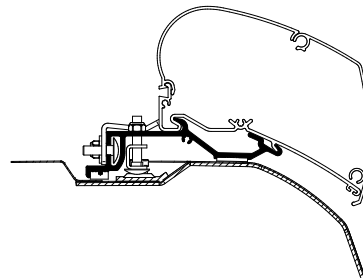


Thule Omnistor: 6300 / 6200



### Mercedes Sprinter > 2007 | VW Crafter 2007-2016

301685 Set: 2x 50 cm + 2x 12.5 cm

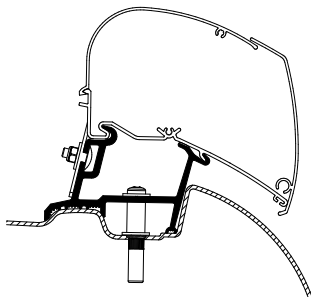


Thule Omnistor: 6300 / 6200



New

### Renault Master | Opel Movano 1998-2010

308059

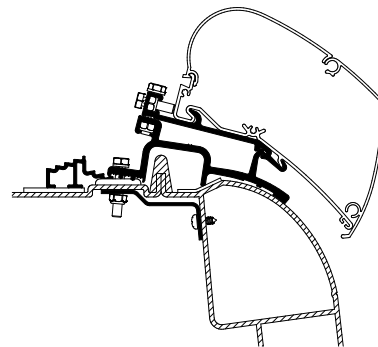


Thule Omnistor: 6300 / 6200



### Renault Master | Opel Movano ≥ 2011

308959 Set: 2x 11.50 cm + 2x 2.70 cm

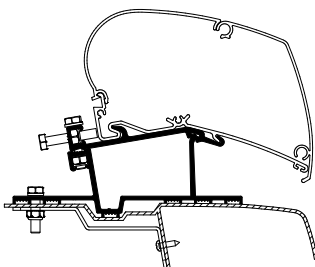


Thule Omnistor: 6300 / 6200



### VW Crafter > 2017

Adapter + EPDM + Adapter covers  
301768 Set: 3 x 40 cm - LHD (EU)  
301771 Set: 3 x 40 cm - RHD (UK)  
**NOTE:** compatible with L3H3 / L4H3 / L5H3  
Not possible to mount on  
the pre-installed rails of VW


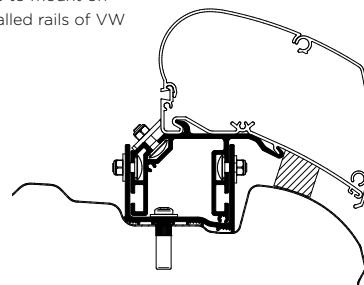

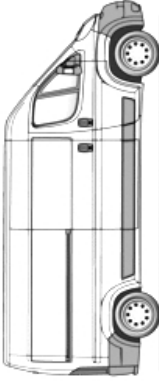
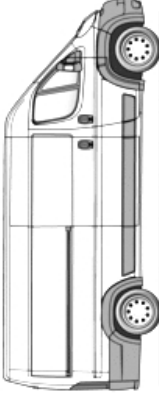


Thule Omnistor: 6300 / 6200



New

# Adapters for vans

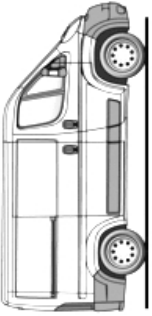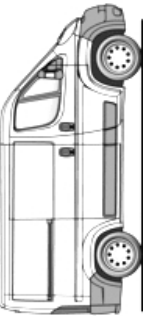Fiat Ducato – Peugeot Boxer – Citroën Jumper				
	C	M	L	XL
	L1 (4963mm)	L2 (5413mm)	L3 (5998mm)	L4 (6363mm)
H1 (2254mm)	 <p>Wall awning 2.60 m - 308659*</p>			
H2 (2524mm)	 <p>- Roof awning 2.60 m - 301649 - Wall awning 2.60 m (Ducato H2 Lift Roof) - 308960</p>	 <p>- Roof awning 3.25 m - 301649 - Wall awning 3.25 m (Ducato H2 Lift Roof) - 308960 - In case of roof rack - 301651</p>	 <p>- Roof awning 3.75 m - 301650 - Wall awning 3.75 m (Ducato H2 Lift Roof) - 308960 - In case of roof rack - 301652</p>	 <p>- Roof awning 4.00 m - 301650 - Wall awning 4.00 m (Ducato H2 Lift Roof) - 308960 - In case of roof rack - 301652</p>
H3 (2764mm)	<p>wheel base 3000 awning length 2.60 m</p>	<p>wheel base 3450 awning length 3.00 - 3.25 m</p>	<p>wheel base 4035 awning length 3.50 - 3.75 m</p>	<p>wheel base 4035 XL awning length 4.00 m</p>

\* Fits only with awning TO 5102









# Adapters for vans

New

Mercedes Sprinter > 2007 - VW Crafter 2007-2016				
	C	M	L	XL
	L1 (5245mm)	L2 (5910mm)	L3 (6945mm)	L4 (7345mm)
H1 (2435-2530mm)				
H2 (2720-2820mm)				
H3 (3045-3055mm)				
	wheel base 3250	wheel base 3665	wheel base 4325	wheel base 4325 XL

NOTE : Adapter 301685 is not compatible with VW Crafter models as from 2017

# Adapters for vans

		<b>VW Crafter 2017</b>				
		<b>M</b>	<b>L</b>	<b>XL</b>		
		<b>L3 (5986 mm)</b>	<b>L4 (6836 mm)</b>	<b>L5 (7391 mm)</b>		
<b>H2 (2355 mm)</b>						
<b>H3 (2590 mm)</b>		 roof awning 3.25 m 301768 (LHD) - 301771 (RHD)	 roof awning 4.00 m 301768 (LHD) - 301771 (RHD)	 roof awning 4.50 m 301768 (LHD) - 301771 (RHD)		
<b>H4 (2798 mm)</b>						
		wheel base 3640 mm	wheel base 4490 mm	wheel base 4490 mm		